


# PARTS

MODELS LDL3930NRB AND LDL3930PRB

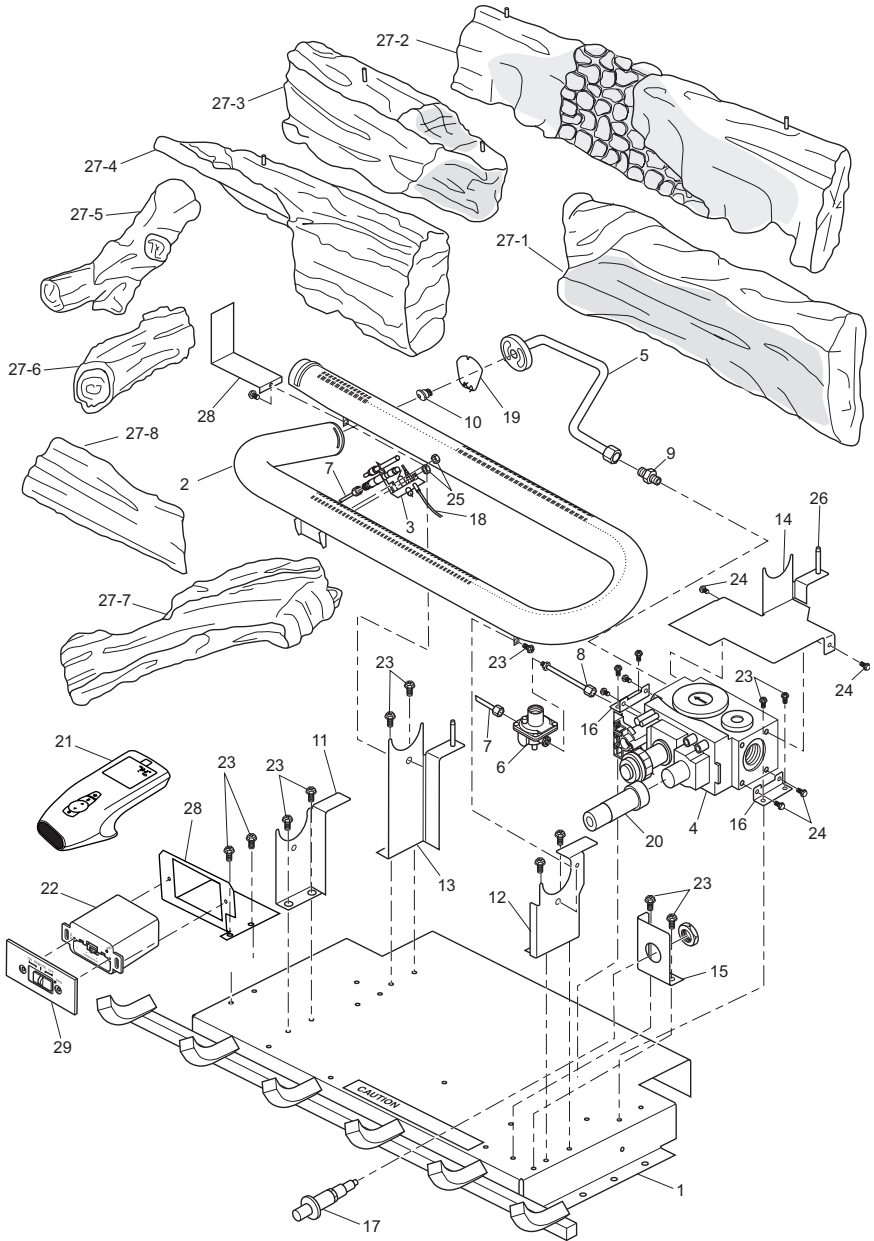

## PARTS

This list contains replaceable parts used in your heater. When ordering parts, follow the instructions listed under Replacement Parts on page 28 of this manual.

KEY NO.	PART NO.	DESCRIPTION	LDL3930NRB		QTY.
1	**	Low Profile Base Assembly, Painted	•	•	1
2	102772-01	Dual Burner	•	•	1
3	PP231	ODS Pilot (Natural Gas)	•	•	1
	PP225	ODS Pilot (Propane/LP)	•	•	1
4	111440-03	Gas Valve	•	•	1
	111440-04	Gas Valve	•	•	1
5	111195-02	Outlet Tube	•	•	1
6	099918-02	Pilot Regulator	•	•	1
7	099387-12	Pilot Tube (Natural Gas)	•	•	1
8	100609-01	Pilot Tube	•	•	1
9	098264-02	Male Connector	•	•	1
10	099056-16	Injector (Natural Gas)	•	•	1
	099056-37	Injector (Propane/LP)	•	•	1
11	110790-01	Left Front Burner Bracket	•	•	1
12	110790-02	Right Front Burner Bracket	•	•	1
13	110790-03	Rear Burner Bracket	•	•	1
14	110790-04	Remote Burner Bracket	•	•	1
15	110793-01	Piezo Bracket	•	•	1
16	110792-01	Remote Bracket	•	•	2
17	102445-01	Piezo Ignitor Service Kit	•	•	1
18	098271-10	Ignitor Cable	•	•	1
19	111124-01	Burner Retainer Spring	•	•	1
20	103784-01	Pilot Knob Extension	•	•	1
21	121129-01	Proflame Remote Control	•	•	1
22	121129-02	Proflame Receiver	•	•	1
23	M11084-26	Screw, HWH AB 10-16 x 0.38	•	•	17
24	M12461-26	Screw, Hex SLT WSR, 10-32 x 0.38	•	•	6
25	098249-01	ODS Nut	•	•	2
26	108631-01	Screw, PPH B 10-16 x 1.00	•	•	2
27-1	111502-17	Rear Log	•	•	1
27-2	111502-14	Middle Log	•	•	1
27-3	111502-15	Left Front Log	•	•	1
27-4	111502-16	Right Front Log	•	•	1
27-5	111502-06	Left Front Crossover Log	•	•	1
27-6	111502-18	Back Crossover Log	•	•	1
27-7	111502-07	Right Front Crossover Log	•	•	1
27-8	111501-03	Control Cover Log	•	•	1
28	120657-02	Proflame Module Bracket	•	•	1
29	121129-03	Proflame Receiver Plate	•	•	1
<b>PARTS AVAILABLE — NOT SHOWN</b>					
	100563-01	Warning Plate	•	•	1
	103877-05	Lighting Instruction Plate	•	•	1
	GA6060	Lava Rock	•	•	1
	101137-02	Hardware Kit	•	•	1
	121129-04	Proflame Wiring Harness	•	•	1

\*\* Not a field replaceable part.